

ABC DIRECT'S GLASSWASHER & DISHWASHER TIPS

DO'S & DON'TS

DAILY TASKS

At the end of each session you should ideally do the following:

- **DO** Switch off machine
- **DO** Remove drain plug and empty machine (either natural gravity or pump assisted)
- **DO** Fill with clean water each session
- **DO** Remove drain filter tray - rinse and remove debris – refit
- **DO** LEAVE DOOR OPEN at end of day (e.g. over night) preventing bacteria build up due to warm temperature

WEEKLY TASKS

Each week you should ideally do the following:

- **DO** Renovate machine & glasses/plates & cutlery
- **DO** Remove wash & rinse jets - rinse and remove debris – refit
- **DO** Use machine cleaner weekly
- **DO** Regenerate water softener weekly

DON'TS

- **DON'T** Wash anything but drinking glasses in the glasswashing machine
- **DON'T** Wash drinking glasses in the dishwashing machine
- **DON'T** Use poor quality detergents
- **DON'T** Tip dregs/ scraps into the machine from un-emptied glasses
- **DON'T** Wash ashtrays in the machine

FOR **FREE** GLASSWASHING AND DISHWASHING MACHINE ADVICE
PLEASE CALL

ABC DIRECT ON **01254 888108** OR VISIT www.abcdirect2u.co.uk